Lew's

MACH BOTTOMLAND® 150

MOBL1SH

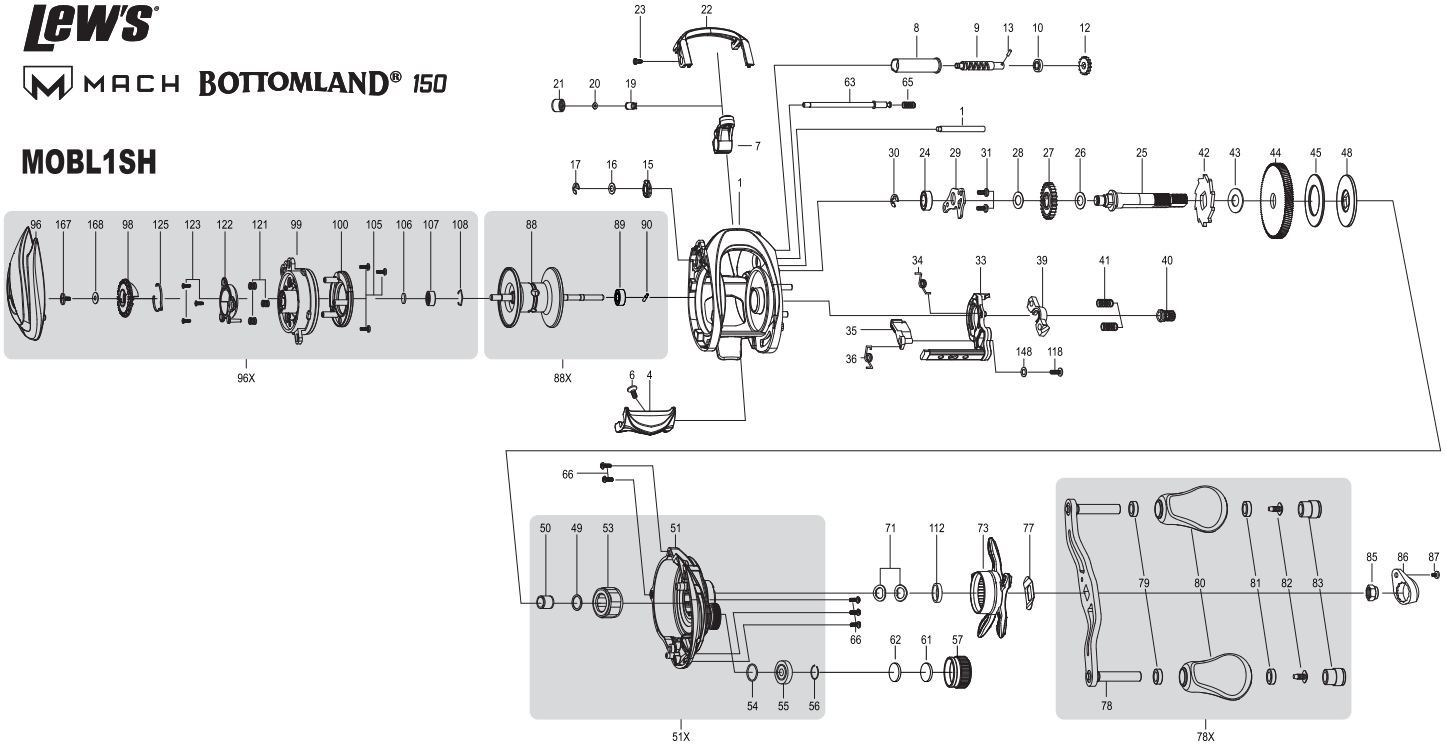

MOBL1SHL

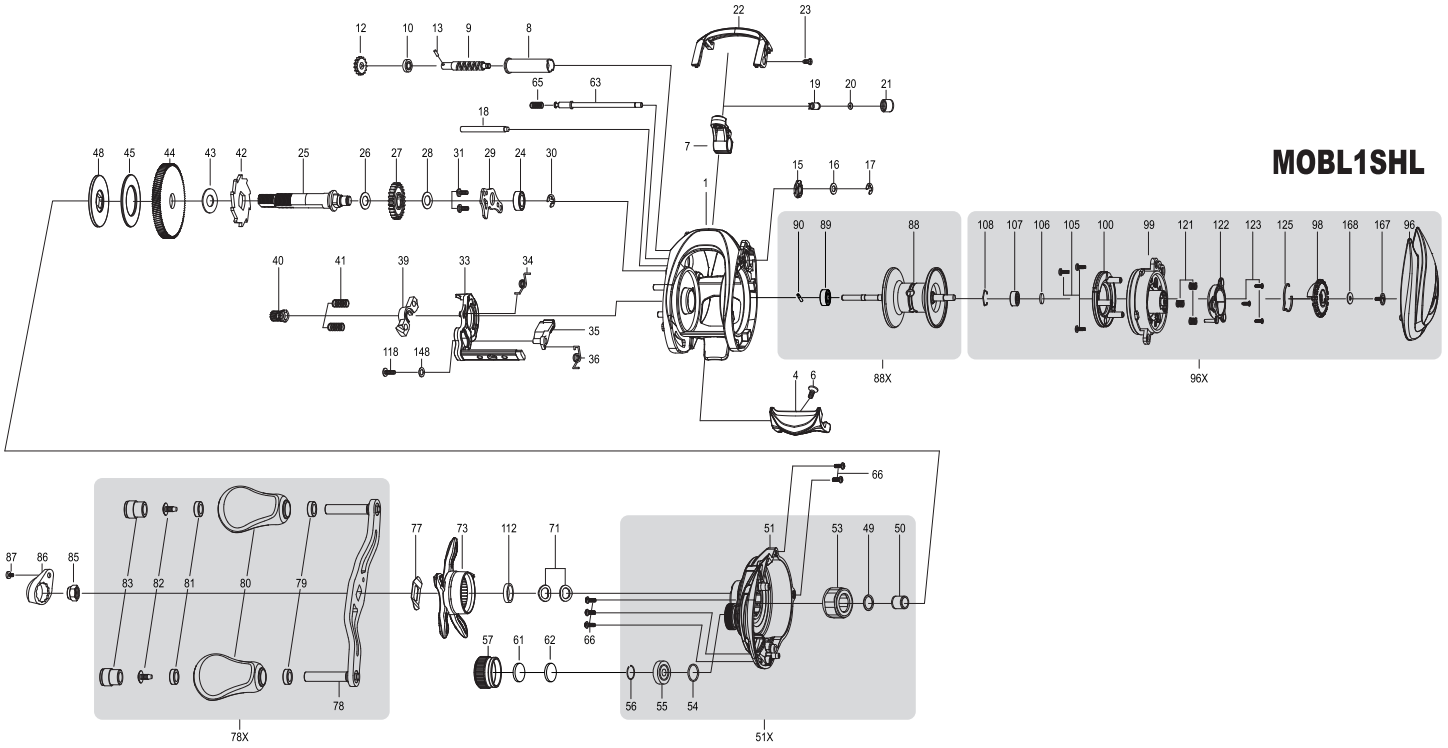

Key#	Part Name	Key#	Part Name
1	FRAME	55	BALL BEARING
4	CLUTCH BAR	56	BEARING RETAINER
6	CLUTCH BAR SCREW	57	CAST CONTROL CAP
7	LEVEL WIND ASSEMBLY	61	TENSION WASHER
8	PIPE	62	SPOOL SPACER-B
9	WORM SHAFT	63	LOCKING PIN
10	BEARING	65	LOCKING PIN SPRING
12	IDLER-S	66	GEAR SIDE COVER SCREW-A(*5)
13	WORM SHAFT PIN	71	DRAG SPRING WASHER(*2)
15	WORM SHAFT BUSHING-B	73	STAR DRAG
16	WORM SHAFT WASHER	77	LEAF SPRING
17	E-RING	78	HANDLE
18	PILLAR	78X	HANDLE COMPLETE
19	LEVEL WIND PIN	79	BEARING(*2)
20	SPACER(OPTIONAL)	80	HANDLE KNOB(*2)
21	LEVEL WIND NUT	81	BEARING(*2)
22	FRONT COVER	82	HANDLE KNOB SCREW(*2)
23	FRONT COVER SCREW	83	HANDLE KNOB CAP(*2)
24	BALL BEARING	85	HANDLE NUT
25	CRANK SHAFT	86	HANDLE NUT CAP
26	IDLER-L WASHER-A	87	SCREW
27	IDLER-L	88	SPOOL
28	IDLER-L WASHER-B	88X	SPOOL COMPLETE
29	BEARING PLATE	89	BALL BEARING
30	E-RING	90	PIN
31	BEARING PLATE SCREW(*2)	96	PALM SIDE PLATE
33	CLUTCH CAM	96X	PALM SIDE PLATE ASSEMBLY
34	CLUTCH SPRING	98	CONTROL DIAL
35	KICK LEVER	99	SPOOL COVER
36	KICK LEVER SPRING	100	MAGNET HOLDER ASSEMBLY
39	PINION YOKE	105	SPOOL COVER SCREW(*3)
40	PINION GEAR	106	SPOOL SPACER-A
41	PINION YOKE SPRING(*2)	107	BALL BEARING
42	RATCHET	108	BEARING RETAINER
43	RATCHET WASHER	112	DRAG SPACER
44	DRIVE GEAR	118	CLUTCH SCREW
45	DRAG WASHER-L	121	SLIDE CAM SPRING(*3)
48	DRAG WASHER-D	122	SLIDE CAM-H
49	SLEEVE WASHER(OPTIONAL)	123	SLIDE CAM SCREW(*3)
50	SLEEVE	125	CLICK SPRING
51	GEAR SIDE PLATE	148	WASHER(OPTIONAL)
51X	GEAR SIDE PLATE ASSEMBLY	167	CONTROL DIAL SCREW
53	ONE WAY CLUTCH	168	CONTROL DIAL WASHER
54	O-RING		

MOBLISH

Key #	Description	Order ID #		Key #	Description	Order ID #
1	FRAME	DY-106261040		53	ONE WAY CLUTCH	DY-104088010
4	CLUTCH BAR	DY-102707010		54	O-RING	DY-100071020
6	CLUTCH BAR SCREW	DY-104739010		55	BALL BEARING	DY-104541010
7	LEVEL WIND ASSEMBLY	DY-103715070		56	BEARING RETAINER	DY-101588011
8	PIPE	DY-101406010		57	CAST CONTROL CAP	DY-106611010
9	WORM SHAFT	DY-100017013		61	TENSION WASHER	DY-100834020
10	BUSHING	DY-102605010		62	SPOOL SPACER-B	DY-100690010
12	IDLER-S	DY-100019010		63	LOCKING PIN	DY-105916010
13	WORM SHAFT PIN	DY-100020010		65	LOCKING PIN SPRING	DY-102665010
15	WORM SHAFT BUSHING-B	DY-104642010		66	GEAR SIDE COVER SCREW-A	DY-100202060
16	WORM SHAFT WASHER	DY-100539020		71	DRAG SPRING WASHER	DY-100088010
17	E-RING	DY-100047010		73	STAR DRAG	DY-105837510
18	PILLAR	DY-102711010		77	LEAF SPRING	DY-100101010
19	LEVEL WIND PIN	DY-100464011		78	HANDLE	DY-U06192020
20	SPACER(OPTIONAL)	DY-100025020		78X	HANDLE COMPLETE	DY-106191020
21	LEVEL WIND NUT	DY-100288021		79	BUSHING	DY-100196010
22	FRONT COVER	DY-106262110		80	HANDLE KNOB	DY-103135010
23	FRONT COVER SCREW	DY-100141020		81	BUSHING	DY-100196010
24	BALL BEARING	DY-104542010		82	HANDLE KNOB SCREW	DY-100180020
25	CRANK SHAFT	DY-103136011		83	HANDLE KNOB CAP	DY-103141010
26	IDLER-L WASHER-A	DY-100647050		85	HANDLE NUT	DY-104094100
27	IDLER-L	DY-101938020		86	HANDLE NUT CAP	DY-102983010
28	IDLER-L WASHER-B	DY-100646020		87	SCREW	DY-101202020
29	BEARING PLATE	DY-104998010		88	SPOOL	DY-U06314060
30	E-RING	DY-100047010		88X	SPOOL COMPLETE	DY-106313060
31	BEARING PLATE SCREW	DY-100135010		89	BALL BEARING	DY-104540010
33	CLUTCH CAM	DY-103582010		90	PIN	DY-100120010
34	CLUTCH SPRING	DY-102688010		96	PALM SIDE PLATE	DY-106266110
35	KICK LEVER	DY-102307011		96X	PALM SIDE PLATE ASSEMBLY	DY-U06266110
36	KICK LEVER SPRING	DY-104137010		98	CONTROL DIAL	DY-106269090
39	PINION YOKE	DY-102073010		99	SPOOL COVER	DY-106267010
40	PINION GEAR	DY-103616010		100	MAGNET HOLDER ASSEMBLY	DY-U06268020
41	PINION YOKE SPRING	DY-102465010		105	SPOOL COVER SCREW	DY-103423010
42	RATCHET	DY-100818010		106	SPOOL SPACER-A	DY-101850010
43	RATCHET WASHER	DY-103772010		107	BALL BEARING	DY-104541010
44	DRIVE GEAR	DY-102868010		108	BEARING RETAINER	DY-102976010
45	DRAG WASHER-L	DY-101531030		112	DRAG SPACER	DY-100087010
48	DRAG WASHER-D	DY-101367010		118	CLUTCH SCREW	DY-100293010
49	SLEEVE WASHER(OPTIONAL)	DY-100144020		121	SLIDE CAM SPRING	DY-102665010
50	SLEEVE	DY-104537010		122	SLIDE CAM-H	DY-105585010
51	GEAR SIDE PLATE	DY-106263140		123	SLIDE CAM SCREW	DY-100526030
51X	GEAR SIDE PLATE ASSEMBLY	DY-U06264140		125	CLICK SPRING	DY-105429010
				148	WASHER(OPTIONAL)	DY-100086050
				167	CONTROL DIAL SCREW	DY-104901010
				168	CONTROL DIAL WASHER	DY-105055010

MOBLISHL

Key #	Description	Order ID #		Key #	Description	Order ID #
1	FRAME	DY-106270040		53	ONE WAY CLUTCH	DY-104088010
4	CLUTCH BAR	DY-102707010		54	O-RING	DY-100071020
6	CLUTCH BAR SCREW	DY-104739010		55	BALL BEARING	DY-104541010
7	LEVEL WIND ASSEMBLY	DY-103715070		56	BEARING RETAINER	DY-101588011
8	PIPE	DY-101406010		57	CAST CONTROL CAP	DY-106611010
9	WORM SHAFT	DY-100017013		61	TENSION WASHER	DY-100834020
10	BUSHING	DY-102605010		62	SPOOL SPACER-B	DY-100690010
12	IDLER-S	DY-100019010		63	LOCKING PIN	DY-105916010
13	WORM SHAFT PIN	DY-100020010		65	LOCKING PIN SPRING	DY-102665010
15	WORM SHAFT BUSHING-B	DY-104642010		66	GEAR SIDE COVER SCREW-A	DY-100202060
16	WORM SHAFT WASHER	DY-100539020		71	DRAG SPRING WASHER	DY-100088010
17	E-RING	DY-100047010		73	STAR DRAG	DY-105837520
18	PILLAR	DY-102711010		77	LEAF SPRING	DY-100101010
19	LEVEL WIND PIN	DY-100464011		78	HANDLE	DY-U06192020
20	SPACER(OPTIONAL)	DY-100025020		78X	HANDLE COMPLETE	DY-106191020
21	LEVEL WIND NUT	DY-100288021		79	BUSHING	DY-100196010
22	FRONT COVER	DY-106271100		80	HANDLE KNOB	DY-103135010
23	FRONT COVER SCREW	DY-100141020		81	BUSHING	DY-100196010
24	BALL BEARING	DY-104542010		82	HANDLE KNOB SCREW	DY-100180020
25	CRANK SHAFT	DY-103144011		83	HANDLE KNOB CAP	DY-103141010
26	IDLER-L WASHER-A	DY-100647050		85	HANDLE NUT	DY-104096100
27	IDLER-L	DY-101938020		86	HANDLE NUT CAP	DY-102983010
28	IDLER-L WASHER-B	DY-100646020		87	SCREW	DY-101202020
29	BEARING PLATE	DY-104998010		88	SPOOL	DY-U06314060
30	E-RING	DY-100047010		88X	SPOOL COMPLETE	DY-106313060
31	BEARING PLATE SCREW	DY-100135010		89	BALL BEARING	DY-104540010
33	CLUTCH CAM	DY-103585010		90	PIN	DY-100120010
34	CLUTCH SPRING	DY-102690010		96	PALM SIDE PLATE	DY-106274100
35	KICK LEVER	DY-102308011		96X	PALM SIDE PLATE ASSEMBLY	DY-U06274100
36	KICK LEVER SPRING	DY-104146010		98	CONTROL DIAL	DY-106269100
39	PINION YOKE	DY-102083010		99	SPOOL COVER	DY-106267010
40	PINION GEAR	DY-103620010		100	MAGNET HOLDER ASSEMBLY	DY-U06268020
41	PINION YOKE SPRING	DY-102465010		105	SPOOL COVER SCREW	DY-103423010
42	RATCHET	DY-101407010		106	SPOOL SPACER-A	DY-101850010
43	RATCHET WASHER	DY-103772010		107	BALL BEARING	DY-104541010
44	DRIVE GEAR	DY-102962010		108	BEARING RETAINER	DY-102976010
45	DRAG WASHER-L	DY-101531030		112	DRAG SPACER	DY-100087010
48	DRAG WASHER-D	DY-101367010		118	CLUTCH SCREW	DY-100293010
49	SLEEVE WASHER(OPTIONAL)	DY-100144020		121	SLIDE CAM SPRING	DY-102665010
50	SLEEVE	DY-104537010		122	SLIDE CAM-H	DY-105585010
51	GEAR SIDE PLATE	DY-106272110		123	SLIDE CAM SCREW	DY-100526030
51X	GEAR SIDE PLATE ASSEMBLY	DY-U06272110		125	CLICK SPRING	DY-105429010
				148	WASHER(OPTIONAL)	DY-100086050
				167	CONTROL DIAL SCREW	DY-104901010
				168	CONTROL DIAL WASHER	DY-105055010