Lew's

SPEED SPOOL RX 200

SSRX-9.5

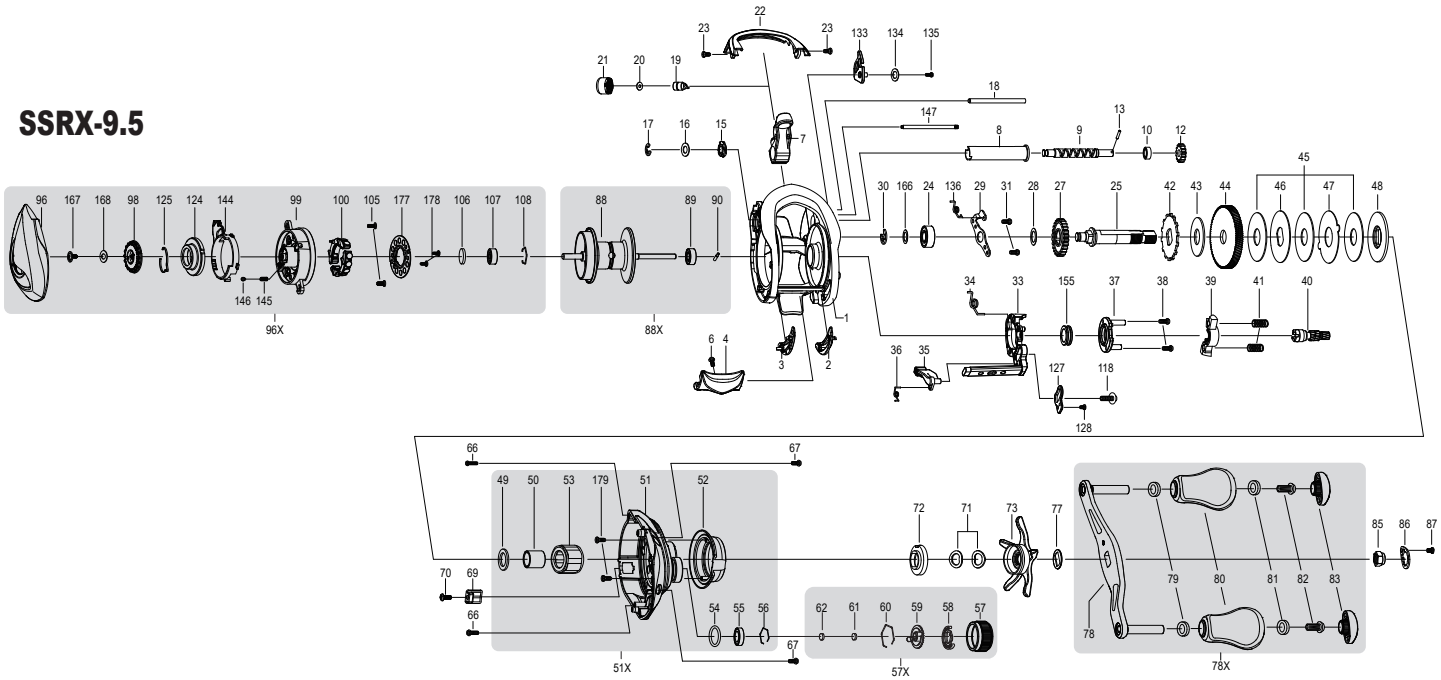

Key#	Part Name	Key#	Part Name	Key#	Part Name
1	FRAME	50	SLEEVE	107	BALL BEARING
2	CLUTCH BAR PLATE-R	51	GEAR SIDE PLATE	108	BEARING RETAINER
3	CLUTCH BAR PLATE-L	51X	GEAR SIDE PLATE ASSEMBLY	118	CLUTCH SCREW
4	CLUTCH BAR	52	GEAR SIDE COVER TRIM	124	SLIDE CAM-D
6	CLUTCH BAR SCREW	53	ONE WAY CLUTCH	125	CLICK SPRING
7	LEVEL WIND ASSEMBLY	54	O-RING	127	LINK PLATE
8	PIPE	55	BALL BEARING	128	LINK PLATE SCREW
9	WORM SHAFT	56	BEARING RETAINER	133	HOOK HOLDER
10	BALL BEARING	57	CAST CONTROL CAP	134	HOOK HOLDER WASHER
12	IDLER-S	57X	CAST CONTROL CAP ASSEMBLY	135	HOOK HOLDER SCREW
13	WORM SHAFT PIN	58	CLICKER	136	HOOK HOLDER SPRING
15	WORM SHAFT BUSHING-B	59	CLICK PLATE	144	LOCK LEVER
16	WORM SHAFT WASHER	60	CLICK PLATE RETAINER	145	CLICK PIN SPRING
17	E-RING	61	TENSION WASHER	146	CLICK PIN
18	PILLAR	62	SPOOL SPACER-B	147	GUIDE PIN
19	LEVEL WIND PIN	66	GEAR SIDE COVER SCREW-A (*2)	155	BUSH
20	SPACER(OPTIONAL)	67	GEAR SIDE COVER SCREW-B (*2)	166	WASHER
21	LEVEL WIND NUT	69	LUBE PORT CAP	167	CONTROL DIAL SCREW
22	FRONT COVER	70	LUBE PORT CAP SCREW	168	CONTROL DIAL WASHER
23	FRONT COVER SCREW (*2)	71	DRAG SPRING WASHER (*2)	177	MAGNET HOLDER COVER
24	BALL BEARING	72	CLICK PLATE ASSEMBLY	178	MAGNET HOLDER COVER SCREW (*2)
25	CRANK SHAFT	73	STAR DRAG	179	GEAR SIDE COVER SCREW-D (*2)
27	IDLER-L	77	HANDLE WASHER		
28	IDLER-L WASHER-B	78	HANDLE		
29	BEARING PLATE	78X	HANDLE COMPLETE		
30	E-RING	79	BALL BEARING (*2)		
31	BEARING PLATE SCREW (*2)	80	HANDLE KNOB (*2)		
33	CLUTCH CAM	81	BALL BEARING (*2)		
34	CLUTCH SPRING	82	HANDLE KNOB SCREW (*2)		
35	KICK LEVER	83	HANDLE KNOB CAP (*2)		
36	KICK LEVER SPRING	85	HANDLE NUT		
37	CAM PLATE	86	HANDLE NUT RETAINER		
38	CAM PLATE SCREW (*2)	87	SCREW		
39	PINION YOKE	88	SPOOL		
40	PINION GEAR	88X	SPOOL COMPLETE		
41	PINION YOKE SPRING (*2)	89	BALL BEARING		
42	RATCHET	90	PIN		
43	RATCHET WASHER	96	PALM SIDE PLATE		
44	DRIVE GEAR	96X	PALM SIDE PLATE ASSEMBLY		
45	DRAG WASHER-L (*3)	98	CONTROL DIAL		
46	DRAG WASHER-D1	99	SPOOL COVER		
47	DRAG WASHER-A	100	MAGNET HOLDER ASSEMBLY (*2)		
48	DRAG WASHER-D2	105	SPOOL COVER SCREW (*2)		
49	SLEEVE WASHER(OPTIONAL)	106	SPOOL SPACER-A		

SSRX-9.5

Key #	Description	Order ID #		Key #	Description	Order ID #
1	FRAME	DY-106150020		58	CLICKER	DY-101674011
2	CLUTCH BAR PLATE-R	DY-104859010		59	CLICK PLATE	DY-101675011
3	CLUTCH BAR PLATE-L	DY-104860010		60	CLICK PLATE RETAINER	DY-101543012
4	CLUTCH BAR	DY-104674010		61	TENSION WASHER	DY-100073011
6	CLUTCH BAR SCREW	DY-104739010		62	SPOOL SPACER-B	DY-100074011
7	LEVEL WIND ASSEMBLY	DY-105527030		66	GEAR SIDE COVER SCREW-A	DY-104086010
8	PIPE	DY-101406010		67	GEAR SIDE COVER SCREW-B	DY-101507010
9	WORM SHAFT	DY-100017013		69	LUBE PORT CAP	DY-103305320
10	BALL BEARING	DY-102954010		70	LUBE PORT CAP SCREW	DY-101507030
12	IDLER-S	DY-100019010		71	DRAG SPRING WASHER	DY-100088010
13	WORM SHAFT PIN	DY-100020010		72	CLICK PLATE ASSEMBLY	DY-U00188030
15	WORM SHAFT BUSHING-B	DY-104642010		73	STAR DRAG	DY-105837530
16	WORM SHAFT WASHER	DY-100539030		77	HANDLE WASHER	DY-100933010
17	E-RING	DY-100047010		78	HANDLE	DY-U06192010
18	PILLAR	DY-102711010		78X	HANDLE COMPLETE	DY-106191010
19	LEVEL WIND PIN	DY-100464011		79	BALL BEARING	DY-100196010
20	SPACER(OPTIONAL)	DY-100025020		80	HANDLE KNOB	DY-105020010
21	LEVEL WIND NUT	DY-100288021		81	BALL BEARING	DY-102950010
22	FRONT COVER	DY-106151010		82	HANDLE KNOB SCREW	DY-100180010
23	FRONT COVER SCREW	DY-100152010		83	HANDLE KNOB CAP	DY-105023010
24	BALL BEARING	DY-102952010		85	HANDLE NUT	DY-104094150
25	CRANK SHAFT	DY-105257010		86	HANDLE NUT RETAINER	DY-103642170
27	IDLER-L	DY-101938020		87	SCREW	DY-101202020
28	IDLER-L WASHER-B	DY-100646020		88X	SPOOL COMPLETE	DY-106928010
29	BEARING PLATE	DY-104411010		89	BALL BEARING	DY-104540010
30	E-RING	DY-100047010		90	PIN	DY-104399010
31	BEARING PLATE SCREW	DY-100028070		96X	PALM SIDE PLATE ASSEMBLY	DY-U06159080
33	CLUTCH CAM	DY-102893010		98	CONTROL DIAL	DY-106236070
34	CLUTCH SPRING	DY-102688010		99	SPOOL COVER	DY-106232010
35	KICK LEVER	DY-106155010		100	MAGNET HOLDER ASSEMBLY	DY-U06233010
36	KICK LEVER SPRING	DY-104137010		105	SPOOL COVER SCREW	DY-103423010
37	CAM PLATE	DY-104354010		106	SPOOL SPACER-A	DY-101850010
38	CAM PLATE SCREW	DY-101177050		107	BALL BEARING	DY-104541010
39	PINION YOKE	DY-103915010		108	BEARING RETAINER	DY-102976010
40	PINION GEAR	DY-106925010		118	CLUTCH SCREW	DY-103013020
41	PINION YOKE SPRING	DY-101308010		124	SLIDE CAM-D	DY-106235010
42	RATCHET	DY-106087010		125	CLICK SPRING	DY-105429010
43	RATCHET WASHER	DY-106177010		127	LINK PLATE	DY-102894010
44	DRIVE GEAR	DY-106906030		133	HOOK HOLDER	DY-102898020
45	DRAG WASHER-L	DY-102377011		134	HOOK HOLDER WASHER	DY-101168020
46	DRAG WASHER-D1	DY-100057020		135	HOOK HOLDER SCREW	DY-100246030
47	DRAG WASHER-A	DY-100985010		136	HOOK HOLDER SPRING	DY-102968011
48	DRAG WASHER-D2	DY-100986010		144	LOCK LEVER	DY-106161020
49	SLEEVE WASHER(OPTIONAL)	DY-100086060		145	CLICK PIN SPRING	DY-103643011
50	SLEEVE	DY-104537010		146	CLICK PIN	DY-102494010
51	GEAR SIDE PLATE	DY-106157190		155	BUSH	DY-104365010
51X	GEAR SIDE PLATE ASSEMBLY	DY-U06157190		167	CONTROL DIAL SCREW	DY-104901010
53	ONE WAY CLUTCH	DY-105718010		168	CONTROL DIAL WASHER	DY-105055010
54	O-RING	DY-100209020		178	MAGNET HOLDER COVER SCREW	DY-104900010
55	BALL BEARING	DY-102381010				
56	BEARING RETAINER	DY-104461010				
57	CAST CONTROL CAP	DY-105871040				
57X	CAST CONTROL CAP ASSEMBLY	DY-U05871040				